## ROLLER BLIND SAFETY FEATURES PLEASE READ CAREFULLY





## WARNING

To comply with EN13120 your roller blind cord is fitted with a "break away connector". The break away piece will separate when excess pressure is applied to the cord.

- Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate this product.
- To avoid strangulation and entanglement, keep cords out of the reach of young children.
- Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.
- Do not tie cords together. Make sure cords do not twist and create a loop.





Children can strangle if these safety devices are not installed. Always use these devices to keep cords or chains out of reach of children.

## ROLLER BLIND FITTING INSTRUCTIONS

You will need:

- Pencil or Bradle
- 4 Screws 1" long
- · Rawl plugs if drilling into plaster/masonry
- Screwdriver
- · Drill with small size drill bit
- A second person to help mark position of blind to get it level or a long spirit level.

Once pack is open you should have a rolled blind on a pole with a fitting in each end. Cord is on the left hand side.

Take the two metal brackets from fittings and position by hand on each end of the blind on the cross grooves.

You now need to hold the blind in the exact position on the window so you can mark the screw holes of the metal plates with the pencil or bradle. Once marked drill the holes 1" deep.

Fix one metal bracket on the wall. Then fix the other bracket. There should be enough play in the brackets to spring open to insert the blind into the cross grooves.

Enjoy your blind!



## WARNING

Roller blinds have a cord control and like any cord can give rise to safety concerns with children. Please keep the cord out of reach of children by using a cord clip (supplied). If the cord is close to the ground or there is furniture that small children can climb to reach the cord please do not put the blind up until the risk has been removed.





